



1

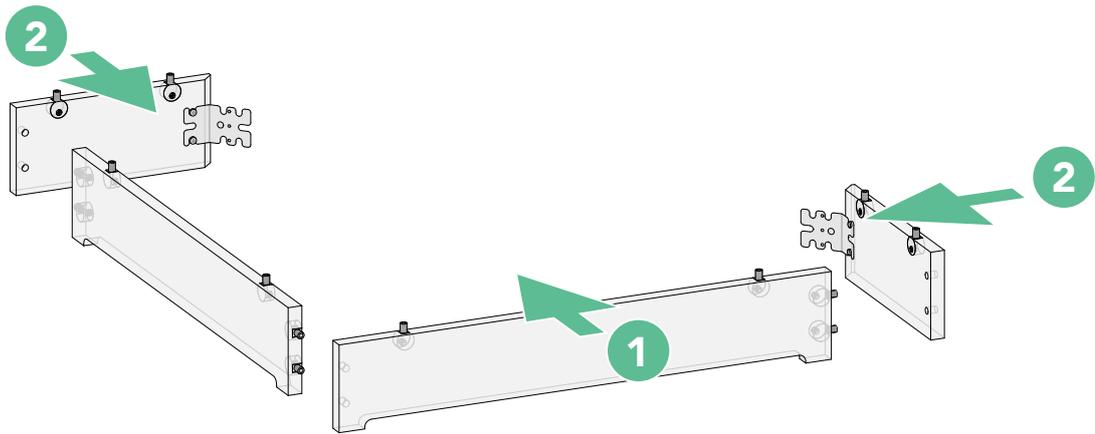


Connect side and back toes of kickboard by aligning cams with their respective sockets and turn phillips head screw in cam clockwise to lock part in place.

2

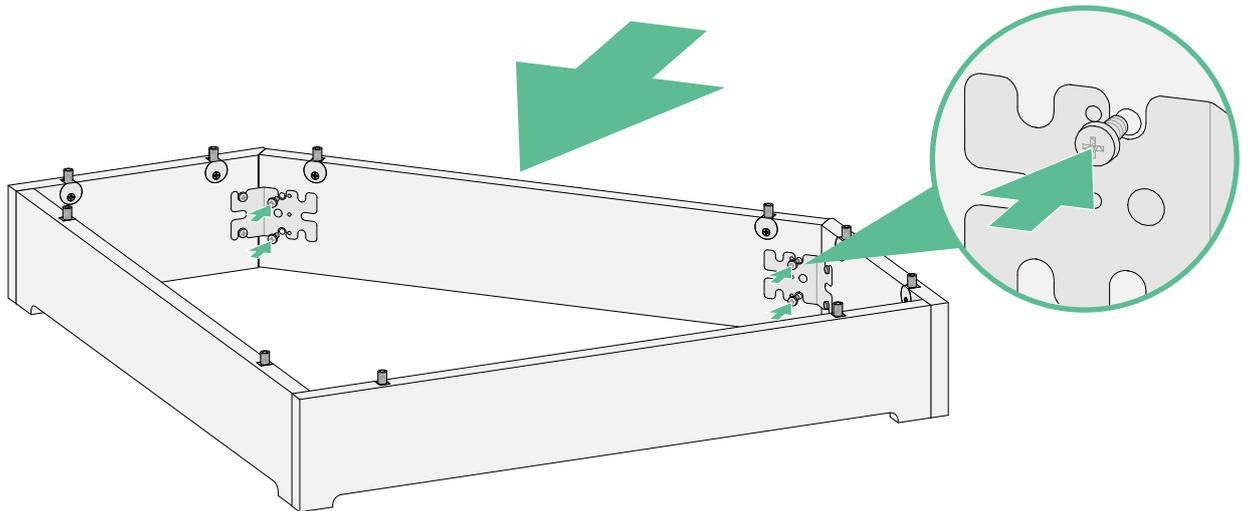

Align the front kickboard piece with the assembly and connect using the provided screws through the bracket slots.

3

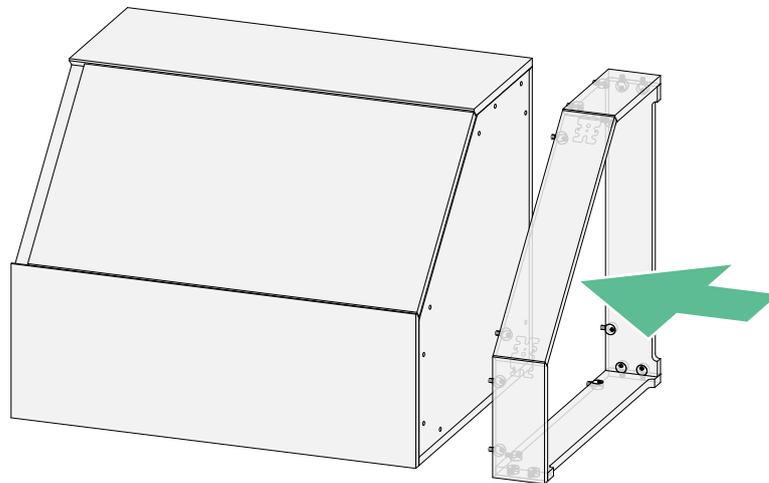

Carefully tip cabinet on its back and align the kickboard using the drill holes in the cabinet base. Push fit kick assembly and turn cam screws to lock the kickboard in place.